

## **Remote Display**



## EMC Conformance

All Tacktick equipment is designed to the best industry standards for use in the recreational marine environment. The design and manufacture of Tacktick equipment conforms to the appropriate Electromagnetic Compatibility (EMC) standards. Correct installation is required to ensure that performance is not compromised.



### Important

Due to the wireless communication systems used in Micronet instruments they are only recommended for use on boats up to 18 metres (60 ft.) **Before installing to a boat of aluminium or steel construction, please contact your Tacktick dealer.**

Like any other electronic instruments your Micronet system is designed to serve only as an aid to navigation and it remains the skippers responsibility to maintain a permanent watch and be aware of developing situations.

Any attempt to take a Micronet product apart will invalidate the warranty. The battery may only be replaced by a person trained and approved for this purpose.

| <b>1</b> | <b>Information</b>                                   | <b>Page</b> |
|----------|--|-------------|
|          | 1.1 Introduction -                                   | 2           |
|          | 1.2 Specifications -                                 | 2           |
|          | 1.3 Power Management and Battery Life -              | 3           |
|          | 1.4 Safety and Disposal -                            | 4           |
| <b>2</b> | <b>Operation</b>                                     |             |
|          | 2.1 Display Information -                            | 5           |
|          | 2.2 Switching the System On and Off -                | 5           |
|          | 2.3 Information Display Operation -                  | 6           |
|          | 2.4 Remote Control Operation -                       | 7           |
|          | 2.5 Backlighting -                                   | 8           |
|          | 2.6 Keylock -  | 9           |
|          | 2.7 Audible Signals and Alarms                       | 9           |
|          | 2.8 Information Display - Data Item Descriptions -   | 10          |
| <b>3</b> | <b>Setup and Calibration</b>                         |             |
|          | 3.1 Entering Setup and Calibration Mode -            | 18          |
|          | 3.2 Setup and Calibration Chapter and Page Operation | 18          |
|          | 3.3 Editing Values -                                 | 18          |
|          | 3.4 Setup Chapter and Page Organisation -            | 20          |
|          | 3.5 Setup Parameter Descriptions -                   | 21          |
| <b>4</b> | <b>Seatrial and Calibration</b>                      |             |
|          | 4.1 Depth Offset -                                   | 31          |
|          | 4.2 Speed Calibration -                              | 32          |
|          | 4.3 Wind Calibration -                               | 33          |
|          | 4.4 Compass Calibration and Alignment -              | 34          |
| <b>5</b> | <b>Installation</b>                                  |             |
|          | 5.1 Changing the Bezel -                             | 35          |
|          | 5.2 Cradle -   | 35          |
| <b>6</b> | <b>Maintenance and Fault Finding</b>                 |             |
|          | 6.1 Care and Maintenance -                           | 36          |
|          | 6.2 Fault Finding and Technical Support -            | 36          |
| <b>7</b> | <b>Warranty Information</b>                          |             |

# 1 Information

## 1.1 Introduction

Your Tacttick Remote Display provides a unique combination of features:

### Mobile display of instrument data

All data available on your Micronet network can be viewed wherever you are located on your vessel.

### Remote control of Micronet displays

The Remote Display can control the other Micronet displays on your network, i.e. Maxi, Dual Maxi and remote enabled models of the Digital, Dual Digital and Analogue displays.

### Solar Power

Your Micronet display is powered for life by the environment. Although feature packed and highly visible in all conditions, current demand is so low, and the supply so efficient, that the solar-powered display is self sufficient. Combined with other displays in the Micronet range this display becomes part of a complete navigational system.



## 1.2 Specifications

|                          |   |
|--------------------------|---|
| <b>Height of digits:</b> | 15mm (0.6 inches)   |
| <b>Backlighting:</b>     | 3 levels with daylight shutoff<br>System-wide or local control  |
| <b>Power:</b>            | Solar Powered<br>300 hrs autonomy by day, 7 nights at brightest backlighting,<br>20 nights at economy backlighting without charge   |
| <b>Units of display:</b> | Boat Speed (knots, km per hour, statute miles per hour)<br>Distance (nautical miles, statute miles, kilometres)<br>Depth (metres, feet, fathoms)<br>Wind Speed (knots, metres per second, Beaufort) |
| <b>Alarm:</b>            | Audible Alarm for Depth, Wind, Cross Track Error and Waypoint Arrival   |
| <b>Weight:</b>           | 135g (0.3 lbs)  |
| <b>Operating Temp.:</b>  | -10 <sup>0</sup> to +60 <sup>0</sup> C (14 <sup>0</sup> to 140 <sup>0</sup> F)  |
| <b>Frequency:</b>        | 868 MHz or 916 MHz  |











### 1.3 Power Management and Battery Life

What makes your Micronet display possible is Tacktick's revolutionary approach to power management. By reducing the amount of power being used by the electronics and maximizing the potential of the sun to provide power, a Micronet display becomes a virtually perpetual device.

Power status is indicated by two icons on the display:

Battery Level  and  Charge Rate

Used together these icons will show the condition of the power supply.

|   |   |   |
|---|---|---|
| Bright Sunny Day<br> |  | Battery is charged and being topped up by the sun. (see Note)   |
|   |  | Battery is low and being charged by the sun.  |
| Overcast Day<br>     |  | Battery is charged and requires no further charging.  |
|   |  | Battery is low but maintaining it's level.  |
| Night<br>            |  | Battery is charged but is not charging.   |
|   |  | Battery is low with no charging.  |
| LOW Power   |  | It is recommended that the instrument be left in daylight for some time for the battery to recover. A fully discharged battery will recharge in approximately 12 hours of direct bright sunlight. |

If using the displays at night, power usage can be reduced dramatically by switching the Backlighting to level 1 or Off. If Backlighting is not required on displays located below decks it is best to set them to "Local" backlighting control (see page 28 S38) so that power is not being wasted in displays which may not be visible from the one being viewed.

**Note:** If the internal battery is fully charged then it does not matter how much the display is subjected to bright sunlight no further charging is required and the Charge Rate Indicator will remain low.



If the displays are to be stored for a long period of time before next use (Over Winter) ensure that the batteries are fully charged before storage.

### Pocket Mode

When Pocket Mode is enabled (see page 28 S35) the Remote display switches off the LCD panel after a user configured time delay. The unit remains connected to the network and pressing any button switches the display panel back on.

### Sleep Mode

If there is no boat speed or change in heading registered on the system for a period of 12 hours your Remote Display will switch off to conserve power. A "POWER SAVE" alarm will sound before the system switches off. Pressing any button within 10 seconds of the alarm sounding will allow the system to remain switched on.

Backlighting will automatically shut down/off when operated in daylight.



**Artificial light WILL NOT recharge the battery.** Placing your Micronet display close to an artificial light will seriously damage the display. Only recharge in natural daylight.

## 1.4 Safety and Disposal

Your Micronet display contains Manganese Lithium Dioxide batteries which should be disposed of correctly. Do not dispose of any instrument in domestic waste. Refer to regulations in force in your country.

If in doubt return the instrument to Tacktick Ltd. for correct disposal.


## 2 Operation




### Important:

Ensure that the "Auto Network" procedure described on the yellow instruction sheet and full Setup and Calibration has been performed correctly before attempting to use your Micronet system.

### 2.1 Display Information

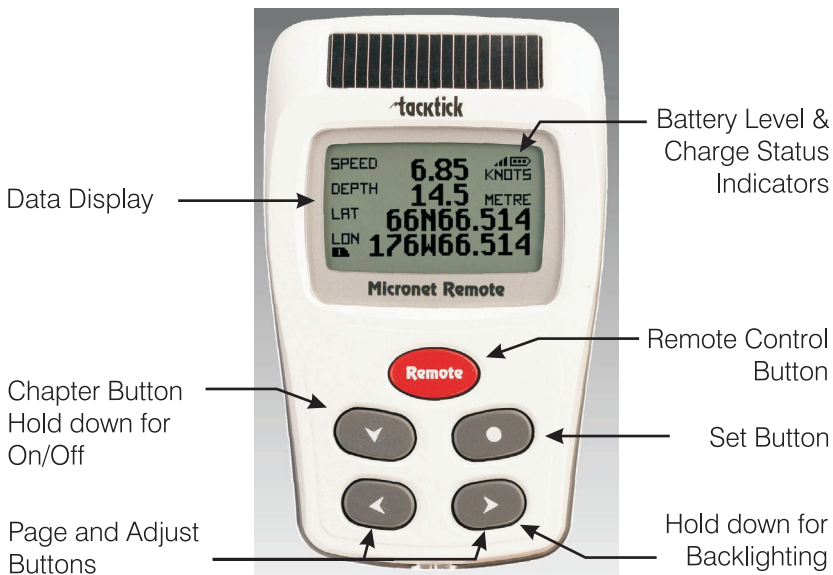

### 2.2 Switching the System On and Off

To switch your Micronet system on or off select any display and press the  button for 2 seconds.




Switch on




Switch off



## 2.3 Information Display Operation

Information is displayed in a "Chapter and Page" format using the  button to scroll through the chapters and the  and  buttons to move between the pages within a chapter. The diagram below shows the information format.

Pressing the  button at any time moves to the next Chapter and the page last selected in that Chapter will be displayed. Both Chapter and Page selection will scroll back to the first page once a cycle has been completed.

Four chapters are available:

### Single line displays



 
Eight pages, each displaying a single item of data. The data item to be displayed on each page can be selected in setup from the full list of data pages described in section 2.8. See setup on page 25 S28.

### Four line displays



Four pages, each displaying four data items. The data items to be displayed on each page can be selected in setup from the full list of data pages described in section 2.8. See setup on page 26 S29


### Rolling Road display



A single page displaying the following navigation data: current waypoint name, distance to waypoint, course over the ground (COG), speed over the ground (SOG), bearing to waypoint, cross track error and turn angle.

A rolling road diagram illustrates the vessels course in relation to the direct track from the previous to the current waypoint and the direction to steer to return to the direct track.



 

### Graph Displays



Two pages, each displaying a plot of a user selected data item against time. See setup on page 26 S30.


For the wind direction graph, LFT and HDR labels indicate the lift and header trend segments of the graph.

#### To alter the time span of a graph:

Press the  button while the graph is displayed. The message "CHANGE TIME" appears at the top of the page. Use the  and  buttons to change the time span. Press  again to confirm the selection.



## Default Chapter and Page diagram

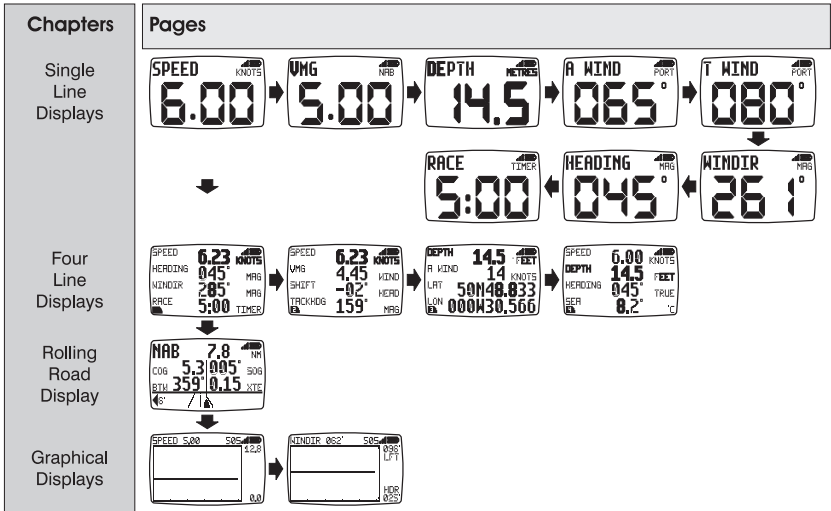

## 2.4 Remote Control Operation

In this mode, the Remote Display is able to control the functions of other displays on the Micronet network.

All remote control screens are displayed in "reverse", with white text on a black background, to allow immediate recognition of remote control mode.

Remote control mode is cancelled if a period of thirty seconds elapses in which no key is pressed. The Remote Display automatically returns to information display mode.

### To enter Remote Control mode



Press and hold the **remote** button.

The Remote Display builds a list of the Micronet displays on the network that are configured for remote control. This list allows the user to select a display to control with the Remote Display. The display that is currently selected for control is indicated by the **➔** and **➜** markers around the display identifier.

The screen of the selected display will flash to indicate that it is under remote control.






Displays on the network can be added to or removed from the list and the order of the list can be modified. See setup on page 27 S32 for details on how to configure the list

### To select a different display for control

 
 


Repeatedly press the **remote** button until the required display is highlighted.

The screen of the newly selected display will flash to indicate that it is under remote control.

### To control the selected display.

Pressing the , ,  or  button on the Remote Display has the same effect as pressing that same button on the controlled display. For example, pressing the  button will cause the controlled display to scroll to the next chapter.

The full range of operation and configuration functions on the controlled display is available by pressing keys on the Remote Display.


Note: The first press of , ,  or  on the remote display causes the screen of the controlled display to stop flashing but the controlled display remains under remote control until the Remote Display exits remote control mode.

### To exit Remote Control mode

 

Press and hold the **remote** button. The Remote Display returns to information display mode.

If a period of thirty seconds elapses without a key press, remote control mode is automatically cancelled and the Remote Display returns to information display mode.

## 2.5 Backlighting

At any stage of the display's operation press and hold for 2 seconds the  button to access the lighting control.



Pressing the  and  buttons will scroll through setting OFF, 1, 2 and 3 whilst changing the backlighting. Depending on the display setup (see page 28 S38), Backlighting on the whole system or just the single display will be altered.

In Pocket Mode, backlighting will turn off automatically after a preset interval which can be configured in setup (see page 28 S35)

Backlighting is automatically switched off in daylight as part of the display's power saving feature and will not operate in daylight.

## 2.6 Keylock

The Keylock feature protects from accidental key presses.

You can enable or disable keylock as follows:

Press and hold  to enter setup

Press  repeatedly to reach the OPTIONS chapter



Press  to open the OPTIONS chapter.

Press  repeatedly to bring the KEY LOCK sentence to the cursor




Press  to toggle between the ON/OFF options


Press and hold  to exit setup.

Once keylock is activated, pressing a key causes the unit to give the unlock key prompt. Press  followed by  to unlock the keys (this will allow the keys to function for one minute, after which the keys will automatically relock).

## 2.7 Audible Signals and Alarms

At stages during its operation your Micronet system will beep to indicate alarms or moments of importance.

**Power-up** Once operating as part of a network the display will issue a single beep as it is switched on by pressing the  button for 2 seconds.

**Button Press** A single beep is issued each time a button is pressed. A second beep is issued after a 2 second hold down of the  button.

**Timer** A single beep will be issued at each minute of the countdown. With 1 minute left to go a beep will sound every 10 seconds. With 10 seconds to go a beep will sound every second. Countdown complete will be indicated by a single burst of three beeps.

**Alarm** Continuous bursts of three beeps will indicate an alarm. The alarm activated will be indicated on the display. Pressing any button will clear the alarm. See fault finding section on page 36.

### Depth Shallow Alarm



The water depth has fallen below the preset alarm level.

The depth value that triggers the alarm is affected by any keel or waterline offsets that have been added.

See page 21 S4 to set the alarm function.

This alarm does not sound as the depth increases above the preset alarm level.

### Depth Deep Alarm



The water depth has increased above or fallen below the preset alarm level. The depth value that triggers the alarm is affected by any keel or waterline offsets that have been added. See page 21 s5 to set the alarm function.

### Wind High Alarm



The wind speed has increased beyond the preset alarm level. See page 22 S6 to set the alarm function. This alarm does not sound as the wind speed decreases below the preset alarm level.

### Cross Track Error Large Alarm



A large cross track error has been alerted by the GPS. See page 22 S7 to set the alarm function.

### Waypoint Arrival Alarm



A waypoint arrival signal has been received from the GPS. The waypoint name is shown on the top line of the display. See page 22 S8 to set the alarm function.

## 2.8 Information Display - Data Item Descriptions

### 1 SPEED



The vessel's actual speed through the water as measured by the Speed Transducer, displayed in the currently selected speed units. See page 22 S9 to set units.



### 2 SPEED MAX (Maximum Speed)



The maximum speed encountered since switch-on or since the last Maximum Speed Reset. To reset see page 21 S2.




### 3 SPEED AVG (Average Speed)



The average speed attained since switch-on or since the last Average Speed Reset. To reset see page 21S3.



#### 4 VMG WIND (Velocity made good to windward)

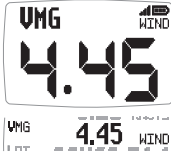


The vessel's calculated Speed Directly Upwind. This value is calculated by the display from the Boat Speed and True Wind Angle.

#### 5 VMG WP (Velocity made good to waypoint)




The vessel's speed directly towards the active Waypoint. This value is calculated by a GPS receiver or plotter.

#### 6 LOG (Total distance travelled)

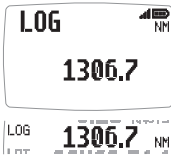


The total distance travelled by the vessel since installation of the display or since a Factory Reset. See page 29 S40 to reset.

#### 7 TRIP (Trip distance travelled)

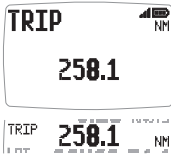

The distance travelled since the last Trip Reset. To Reset see page 21 S1.

#### 8 DEPTH

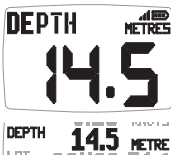


The actual depth beneath the vessel as measured by the Depth Transducer.

Displayed in the currently selected depth units.

See page 22 S10 to select depth units.

The displayed value will be affected by any keel or waterline offset added. See page 24 S18 to set an offset.

#### 9 A WIND KNOTS/M S (Apparent wind Speed)

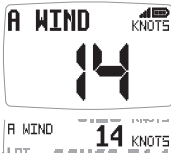


The apparent wind speed with respect to the vessel as measured by the Wind Transmitter, displayed in the currently selected wind units. See page 23 S11 to select wind units.

### 10 A WIND PORT/STBD (Apparent wind angle)




The apparent wind angle with respect to the vessel as measured by the Wind Transmitter.

### 11 T WIND KNOTS/M S (True wind speed)

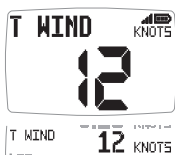

The true wind speed with respect to the vessel, calculated by the display taking into account the vessels speed through the water. Apparent Wind Speed, Angle and Boat Speed must be available for this calculation.

### 12 T WIND PORT/STBD (True wind angle)

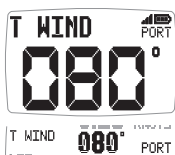

The true wind angle with respect to the vessel, calculated by the display taking into account the vessels speed through the water. Apparent Wind Speed, Angle and Boat Speed must be available for this calculation.

### 13 WINDIR (True wind direction)




The true wind direction over the water, calculated by the display taking into account the vessels speed through the water and compass heading. Apparent Wind Speed, Angle and Compass Heading must be available for this calculation.

### 14 BEAUF (Wind speed on Beaufort scale)



The actual wind speed over the water displayed using the Beaufort scale, calculated by the display taking into account the vessels speed through the water and compass heading. Apparent Wind Speed, Angle and Compass Heading must be available for this calculation.



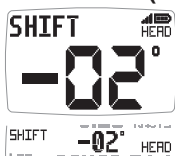






### 15 SHIFT (Wind shift angle, head or lift)



Indicates changes in the wind against a compass heading. Spotting these wind changes is the key to fast sailing upwind.


The system automatically detects the mean wind direction by averaging over a time period of 2 minutes to 60 minutes. This time period can be changed in setup, see page 24 S22.

To manually override this automatic calculation and set the mean wind direction:

1. If a Wind Transmitter is included in your Micronet system then simply press the  button; (the current wind direction is stored as the mean wind direction and displayed for 5 seconds during which time the  and  buttons may be used to adjust the value.)  
If the mean wind direction changes, press  again.
2. If you do not have a Wind Transmitter included, sail close hauled and press the  button then tack and, once close hauled, press the  button again.  
If the mean wind direction changes then the display may be updated by pressing and holding the  button while sailing on port tack, the  button while sailing on starboard tack or the  button while head to wind.

See Tacktick's "Using wind shifts to your advantage" sheet for further information, this is available on the Tacktick web site, [www.tacktick.com](http://www.tacktick.com).

## 16 HEADING

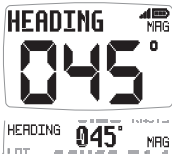

Current magnetic compass heading of the vessel as measured by the Compass Transducer.

The value displayed will be affected by the calibration routine for the compass (see page 34).

The heading is displayed as degrees Magnetic or True depending on the current compass setting.

See page 24 S24 to set.

## 17 TACKHDG (Heading on opposite tack)



Magnetic compass heading that the vessel will follow should it tack through the wind, calculated by the display. Apparent Wind Angle and Magnetic Heading must be available for this calculation to be made.

## 18 SOG (Speed over the ground)



The vessel's speed over the ground as calculated by the GPS Antenna or a GPS receiver.

 
### 19 COG (Course over the ground)



The vessel's course over the ground as calculated by the GPS Antenna or a GPS receiver.



### 20 LAT (Latitude)



The vessel's current latitude as calculated by the GPS Antenna or a GPS receiver.



### 21 LON (Longitude)



The vessel's current longitude as calculated by the GPS Antenna or a GPS receiver.



### 22 BTW (Bearing to waypoint)



Bearing to (active) waypoint. The active waypoint being the one to which the GPS is currently navigating as defined by a GPS receiver or plotter.

The waypoint name will be displayed.



### 23 DTW (Distance to waypoint)

 


Distance to active Waypoint. The active waypoint being the one to which the GPS is currently navigating as defined by a GPS receiver or plotter.

The waypoint name will be displayed.



### 24 XTE (Cross track error)




The distance away from the direct track to the (active) waypoint as defined by a GPS receiver or plotter.

The arrow indicates the direction to steer to get back onto course to the waypoint.





## 25 TTG (Time to go to waypoint)

 

The calculated time remaining before you will arrive at the (active) waypoint as calculated by a GPS receiver or plotter.



## 26 SEA (Sea temperature)



Current sea temperature as measured by the sensor in the Speed Transducer.

Displayed in the current temperature units.

See p 23 S13 to select units.



## 27 RACE TIMER





Countdown and elapsed time clock.

The timer can only be set and operated in single item display mode. In 4 line display mode the current state of the countdown or elapsed time can be viewed but not modified.



To set the countdown period:

Press and hold for 1 second the  button.


Use the  and  buttons to set the required countdown time in minutes.


Press the  button quickly to prepare to start the countdown.

To operate the timer:


Press the  button quickly to start the countdown.

The display will sound a single beep every 60 seconds until 1 minute remains when a beep will sound at 10 second intervals. The final 10 seconds will count down with a beep each second with "START" being indicated by a triple quick beep at 0 seconds.



At any time during the countdown a quick press of the  button will re-synchronise the timer to the nearest minute and commence countdown from that point.

 
After the countdown is completed, the timer will automatically start to count the elapsed time and this will continue until the  button is pressed and held for 2 seconds.




Press and hold  to enter the timer setup



Use  and  to select the desired countdown time



Press  to store the countdown time

 


Press  to start the countdown




Countdown in progress



Press  to reset timer to the nearest whole minute


## 28 TIME

 

Current time as received from the GPS Antenna, corrected to local time if an offset has been added. See page 28 S37 to set an offset.



## 29 DATE

 

Current date as received by the GPS Antenna.



## 30 POWER



The voltage connected to the Power input of the Hull Transmitter or the Wireless (NMEA) Interface.



**31 FFD-1 to FFD-6 (Custom data displays)**


If you have a Wireless (NMEA) Interface connected to a PC with Tacktick proprietary NMEA output capability (PTAK) then your six user defined free format pages will be displayed in these custom data display pages. Typically used by racing sailboats to show "Time to Layline" or corrected True Wind Direction where the Upwash Correction Table is built into the PC.

**32 OFF (Null data item)**

This item is used to mark a page of a single line display, or a line of a four line display as "hidden".

## 3 Setup and Calibration

### 3.1 Entering Setup and Calibration Mode


To enter the Setup and Calibration menu press and hold for 2 seconds the  button.

**Note:** It is not possible to enter setup mode while the Race Timer is currently visible on a single item display page. Scroll to a different page in order to enter setup.

### 3.2 Setup and Calibration Chapter and Page operation


On entering setup mode a list of chapters is displayed, with the active chapter marked with the cursor .

#### To change the active chapter:


Press the  button repeatedly until the desired chapter title is alongside the cursor.

#### To enter the active chapter:



Press the  button. A list of pages is displayed with the active page marked with the cursor .


Press the  button to return to the list of chapters.

#### To change the active page:



Press the  button repeatedly until the desired page title is alongside the cursor.

#### To enter the active page:

Press the  button. A list of parameters and current settings is displayed with the active parameter over the cursor .

Press the  button to return to the list of pages.

#### To change the active parameter:

Press the  button repeatedly until the desired parameter title is over the cursor .

### 3.3 Editing Parameter Values

Parameter values may be one of four types:

A user editable numeric value (for example, the shallow depth alarm may have the value 3.2).

A resettable numeric memory value (for example the minimum depth memory can be reset to the current depth).

A list of options (for example, the speed units parameter may have the values KNOTS/KPH/MPH).

An ON/OFF toggle (for example the Cross Track Error alarm can be either ON or OFF).

**To edit a numeric parameter value:**

Press the  button. The value data will begin to flash.

Use the  and  buttons to adjust the value.

Press the  button again to set the new value.

**To reset a memory value:**

Press the  button. The parameter is reset.

**To select a parameter option from a list:**

Press the  button. The parameter option will begin to flash.

Use the  and  buttons to select the option required.

Press the  button again to set the new option.


**To toggle between ON/OFF parameter settings:**

Press the  button. The setting will toggle between ON and OFF.

### 3.4 Setup Chapter and Page Organisation

The diagram below shows the Setup and Configuration chapter and page organisation.

For a full description of each setup parameter refer to items S1 to S47 on the following pages.

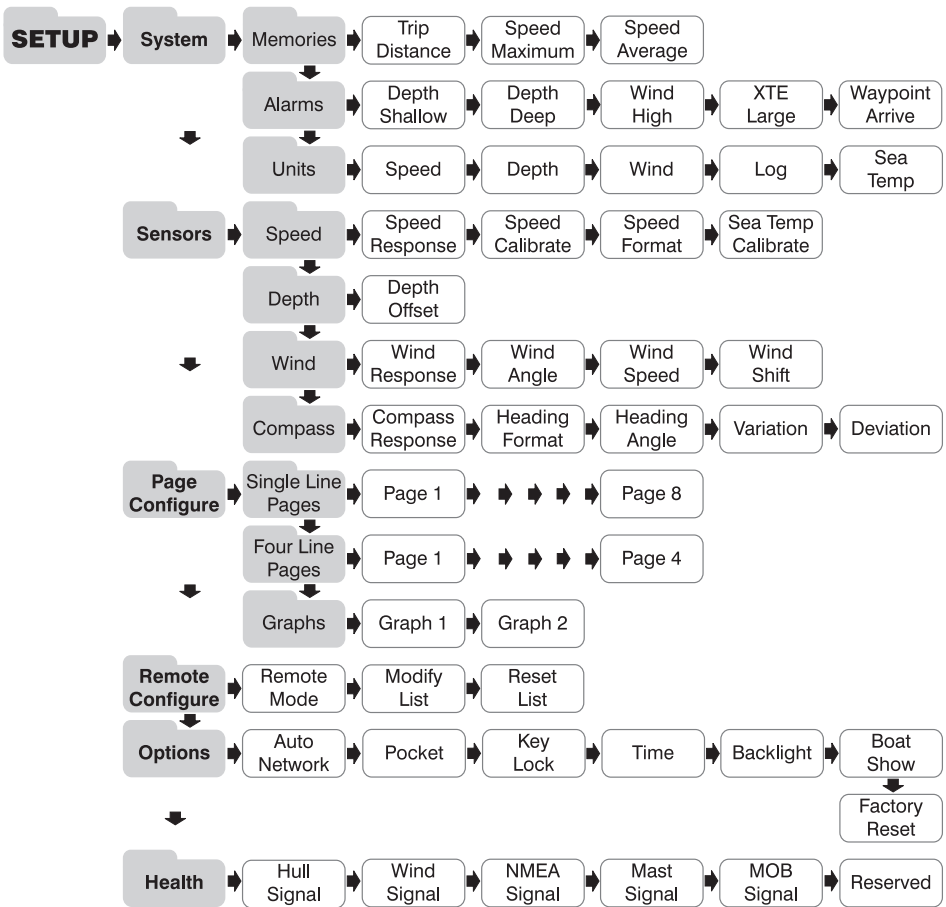

## 3.5 Setup Parameter Descriptions

### System Chapter

In the descriptions below, system default values/options are shown in bold text

#### Memories Page

##### S1 Trip



The distance travelled since the last Trip Reset. Resets to 0.00.

##### S2 Speed Maximum



The maximum speed attained since switch on or since the last Maximum Speed Reset. Resets to current boat speed.

##### S3 Speed Average



The average speed attained since switch on or since the last Average Speed Reset. Resets to current boat speed.

#### Alarms Page

##### S4 Shallow Water Alarm



Sets the shallow depth at which the display will alarm. The options are: **Off** and 0.0 to 25.0 feet (0.0 to 7.6 metres) (0.0 to 4.1 fathoms).

Values are displayed in the previously selected units (see page 22 S10 to select units) and are all subject to any keel or waterline offset added (see page 23 S18 to set an offset).

This alarm sounds as the depth passes below the set value and NOT as the depth increases past this value.

##### S5 Deep Water Alarm



Sets the deep depth at which the display will alarm. The options are: **Off** and 0.0 to 250 feet (0.0 to 76.2 metres) (0.0 to 41.6 fathoms). Values are displayed in the previously selected units (see page 22 -s10 to select units) and are all

subject to any keel or waterline offset added (see page 23 s18 to set an offset).

This alarm sounds as the depth increases past this value or decreases past this value.

 
## S6 High Wind Alarm



Sets the wind speed at which the display will alarm. The options are: **Off** and 0.0 to 100 knots (0.0 to 51.4 m/s). Values are displayed in the previously selected units (see page 22 S11 to select units).

This alarm sounds as the wind speed increases past the set value and NOT as it decreases past this value.


## S7 Cross Track Error Alarm



Sets the display to alarm if a Large Cross Track Error Alarm is issued by the GPS.

The options are: On/**Off**.

## S8 Waypoint Arrival Alarm

 

Sets the display to alarm if a Waypoint Arrival Alarm is issued by the GPS.

The options are: On/**Off**.

## Units Page

### S9 Speed



The units in which ALL speed related information is displayed.

 
The options available are: **KNOTS**, KPH (Kilometres per hour) or MPH (Statute Miles per hour).

### S10 Depth



The units in which ALL depth related information is displayed. The options available are: **FEET**, METRES or FATHOMS.

### S11 Wind



The units in which ALL wind speed related information is displayed.

The options available are: **KNOTS** or M/S (Metres per second).

### S12 LOG (Distance)



Sets the units in which ALL Distance related information is displayed.

The options available are: **NM** (Nautical Miles), KM (Kilometres) or SM (Statute Miles).



### S13 Temperature



Sets the units in which water temperature information is displayed.

The options available are: **°C (Degrees Celsius)** or **°F** (Degrees Fahrenheit).

## 4.2 Sensors Chapter

### Speed Page

 
### S14 Speed Response



Sets the update period of the Speed display.

The options are: **Auto**/Slow/Medium/Fast


### S15 Speed Offset (%)



The boat speed calibration factor adds a percentage factor which corrects the information from the paddlewheel and ensures the boat speed is displayed correctly.

See page 32 for the calibration procedure.


### S16 Speed Display Format

 

Sets the number of decimal places to which the boat speed information is displayed.

The options are **0.1** or 0.01.


### S17 Sea Temperature Calibration

 

The sea temperature calibration factor adds a value which corrects the information from the temperature sensor and ensures the water temperature is displayed correctly.

## Depth Page

 
### S18 Keel / Waterline Offset



Allows a keel offset to be added allowing the display depth reading to indicate depth below the bottom of the boat, or a waterline offset allowing the depth reading to indicate actual water depth. See page 31 to set a depth offset.


## Wind Page
 
### S19 Wind Response




Sets the update period of the wind display. The options available are: **Auto**/Slow/Medium/Fast.

### S20 Wind Angle

 


Aligns the displayed apparent wind angle with the actual wind direction with respect to the boat. See page 33 for the calibration process.

### S21 Wind Speed Calibration (%)

 

The wind speed calibration factor adds a percentage factor which corrects the information from the wind speed sensor and ensures the apparent wind speed is displayed correctly. See page 33 for the calibration process.

### S22 Wind Shift

 

The time period over which the system determines the mean wind direction can be user adjusted in the range 2 to 60 minutes. (**Default 10 minutes**)

## Compass Page

### S23 Heading Response



Sets the update period of the compass display. **Auto**/Slow/Medium/Fast

### S24 Heading Format



Tells the system to show heading information in either **Magnetic** or True format.

### S25 Compass Offset



Aligns the displayed heading with the actual magnetic heading of the boat. See page 34 for the calibration process.

## S26 Magnetic Variation



Allows manual entry of local magnetic variation. This setting is ignored if variation information is available from a GPS source.

 
## S27 Magnetic Deviation




However carefully positioned the Compass Transducer is there is always the possibility of errors being introduced by the vessel and equipment. To remove errors it is necessary to "Swing" the compass by turning the boat slowly until the system can optimize the readings. Once the correction has been completed the deviation correction value will be displayed. See page 34 for the calibration process.

## Page Configuration Chapter




### S28 Single-Line Display Page







This setup page allows the selection of the data items to be displayed on each of the 8 single item display pages.

When this page is first selected, the display shows the cursor  beneath the title of the data item currently selected for display page 1.

#### To select an alternative single line display page:

Press the  button repeatedly to show the data items currently allocated to pages 2 through 8 (the cursor changes from  to  as appropriate).

#### To change the data item associated with a page:

Press the  button. The currently selected item will flash. Press the  or  button repeatedly until the required data item title is under the cursor. Press  to confirm the selection.




If a single line page is set to display the OFF (null) data item, the page concerned is removed from the cycle of single line display pages. If all single line display pages are set to display the OFF (null) data item, the whole single line display chapter is removed from the chapter cycle.

## S29 Four-Line Display Page

 



This page permits the selection of a four-line display page to configure.




### To select a four-line display page to configure:

Press  repeatedly until the desired page is next to the cursor . Press  to configure the page.





### To select a line to configure:



Initially, the display shows the cursor  beneath the title of the data item currently selected for line 1 of the four-line display page.

Press the  button repeatedly to show the data items currently allocated to pages 2 through 4 (the cursor changes from  to  as appropriate).

 
### To change the data item associated with a line:

Press the  button. The currently selected item will flash. Press the  or  button repeatedly until the required data item title is under the cursor. Press  to confirm the selection.

If a page has all four lines set to display the OFF (null) data item, it is removed from the cycle of four-line display pages.

If all lines of all four-line display pages are set to show the OFF (null) data item, the whole four-line display chapter is removed from the chapter cycle.




## S30 Graphs Page







This page permits the selection of the data item to be plotted on each of the two graphical data display pages.

### To select a line to configure:

Initially, the display shows the cursor  beneath the title of the data item currently selected for graphical display page 1.

Press the  button to show the data items currently allocated to graphical display page 2 (the cursor changes from  to ).

 
### To change the data item associated with a line:


Press the  button. The currently selected item will flash. Press the  or  button repeatedly until the required data item title is under the cursor. Press  to confirm the selection.

The options available are **Speed (max 25 Kts)**, VMG to Wind (max 25 Kts), VMG to Waypoint (max 25 Kts), Depth (max 250 ft), App Wind Speed (max 50 Kts), True Wind Speed (max 50 Kts), SOG (max 25 Kts), Sea Temperature, Power Volts, Apparent Wind Angle, True Wind Angle, **True Wind Direction**, Heading and COG.


## Remote Chapter


### S31 Remote Mode



Permits the remote control function to be enabled or disabled. Press the  button to toggle between ON and OFF.

### S32 Modify Control List

 

The Remote Display builds a list of the Micronet displays on the network that are configured for remote control. This list allows the user to select a display to control with the Remote Display. By default, all Maxi and Dual Maxi displays on the network are shown on the list of controllable displays when the  button is pressed. By default all other displays on the network are hidden from the list.

#### To modify the list of controllable displays:

Press the  button to enter list configuration mode.

A list of all displays currently connected to the network is shown.

Individual displays are identified by a numeric display ID (starting at :01) and are marked as follows:



**SHOW** - the display will be visible in the list of available displays.

**HIDE** - the display is connected to the Micronet network, is compatible with remote control, but will not be shown on the list of controllable displays.

**N.C.** - (Non Controllable) the display is connected to the Micronet network but is not compatible with remote control (i.e. it has an older version of the software). This display will not be shown in the list of controllable displays.

**WAIT** - the system is building the list of connected displays.

#### To add or remove a display from the list of controllable displays:



Press the  button to scroll down the list. The sequence number of the display in the list of controllable displays is shown by the  cursor.

Press the  button, the selected display entry will flash.

Press  or  to toggle between SHOW and HIDE.


Press  to confirm the change.

### To alter the position of a display in the list of controllable displays:

 
Press the  button to scroll down the list. The sequence number of the display in the list of controllable displays is shown by the  cursor.

Press the  button, the selected display entry will flash.

Press the  button until the required sequence number appears beside the display.

Press the  button to confirm the new sequence number. All displays below the selected display are pushed down the list.

## S33 Reset List



Returns the list of controllable displays to its default settings.

## Options Chapter

### S34 Auto Networking



Adds display units or transducers to the Micronet network. This function is only available on the display which was used to power up the system. Refer to the "Auto Network" sheet for further information.

### S35 Pocket Mode



 
Sets the time out value for Pocket Mode, the options are OFF, 15, **30**, 60 or 120 seconds.

### S36 Key Lock




Enables the key locking feature. See Page 9 for the key locking process.

### S37 Time



The number of hours added or subtracted from UTC (GMT) to allow the display to show local time.

### S38 Light

 


Configures the display to control the system backlighting or just its own backlighting. The options are: **Network/Local**.

### S39 Boat Show (Demonstration Mode)



 Allows the display to show information when NOT installed as part of a Micronet system for demonstration purposes only. Displays will return to default **Off** on power down.

### S40 Factory Reset




Returns all the calibration setting to the factory default values.


## Health Chapter
 
### S41 Software Version/Network Nodes

The top line of each Health chapter screen shows the software version of the Remote Display, battery level and charge rate to assist in troubleshooting and fault finding.




 If the display is the "Master" (the one used to switch on the system) then the number of items (nodes) in the system will be shown.




If the display is a "Slave" (was switched on by the system) then the signal strength to the "Master" will be shown in place of the number of nodes.

### S42 Hull Transmitter Signal Strength

 


Shows the signal strength, software version, battery level and charge rate of the Hull Transmitter to assist in troubleshooting and fault finding.

### S43 Wind Transmitter Signal Strength

 


As above but for Wind Transmitter information.

### S44 Wireless (NMEA) Interface Signal Strength

 


As above but for Wireless (NMEA) Interface information.

### S45 Mast Rotation Transmitter Signal Strength

 

As above but for the Mast Rotation Transmitter

### S46 MOB Transmitter Signal Strength

 

As above but for MOB Transmitter

### S47 Type 6 to Type 9 Signal Strength

For possible future use.



## 4 Seatrial and Calibration


Once the Micronet system has been installed on the vessel and Auto Networking has been completed it is necessary to carry out Calibration.



**It is not safe to use the displays for navigational purposes until Calibration has been carried out correctly.**

### 4.1 Depth Offset

The default depth offset is 0.0 making the display read the depth below the transducer. By adding a +ve or -ve offset the display will show the waterline depth or depth below the keel respectively.

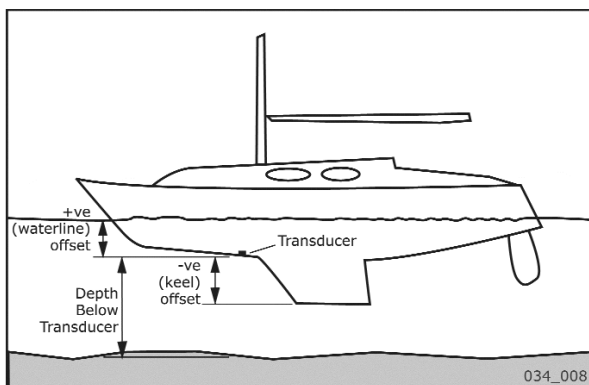


#### To enter a depth offset:

 
Press and hold the  button for 2 seconds to enter Setup.


Press the  button repeatedly to scroll to the Sensors chapter.

Press the  button to enter the sensors menu.

Press the  button repeatedly to scroll to the Depth page.


Press the  button to advance to the Keel/Waterline Offset parameter.



Press the  button to enter Edit Mode, the parameter value will flash.

Press the  and  buttons to change the value.

Press the  button to exit Edit Mode.

Press and hold the  button to exit Setup and return to normal operation.

## 4.2 Speed Calibration

To ensure that the boat speed (and distance) is accurate it is necessary to calibrate the speed to take into account variations in water flow between different hulls. Adjustment is made by multiplying the speed through the water (V) by a percentage calibration factor.

It is essential to carry out this procedure at a time when little or no tide is flowing.

To take account of tidal flow, the calibration run should be carried out twice, once with the tide and once against the tide. The calibration percentage factor should then be set to the average of the factors determined by the two runs.

### To enter a Log Calibration Factor:

With the vessel under power, steer a straight course allowing the boat speed reading to settle to a constant value. Check the GPS is showing a constant SOG.

Press and hold the  button for 2 seconds to enter Setup.

 
Press the  button to select the Sensors chapter.

Press the  button to enter the Sensors chapter.


Press the  button to select the Speed page.

Press the  button to enter the Speed page.


Press the  button repeatedly to scroll to the Speed % parameter.



Press the  button to enter Edit Mode, the parameter value will flash.

Press the  and  buttons to change the displayed % value until the speed reading shown (in small text) matches the SOG from the GPS.

Press the  button to exit Edit Mode.

Press and hold the  button to exit Setup and return to normal operation.

Should you be unable to carry out this procedure due to strong tidal conditions or poor GPS information there is further information regarding Speed Calibration using a measured distance on the Tacktick website at [www.tacktick.com](http://www.tacktick.com).

## 4.3 Wind Calibration

Both Wind Speed and Direction can be calibrated to ensure that readings from the Wind Transmitter are displayed accurately.

### Wind Angle Offset

Motor the vessel directly into the wind.


Press and hold the  button to enter Setup.

 
Press the  button repeatedly to select the Sensors chapter.


Press the  button to enter the Sensors chapter.



Press the  button repeatedly to select the Wind page.

Press the  button to enter the Wind page.


Press the  button repeatedly to select the **WIND +/- °** (Wind angle) parameter.



Press the  button to enter Edit Mode, the parameter value will flash.

Press the  and  buttons to change the wind angle displayed (in small type) to 000. The display will indicate the number of degrees of offset entered.

Press the  button to exit Edit Mode.

Press and hold the  button to exit Setup and return to normal operation.

### Wind Speed Correction

**Note:** The Wind Speed reading is factory calibrated to display correctly and should not be altered unless external factors are thought to be causing incorrect readings. Correction should only be carried out if a known correct Wind Speed is available.


Press and hold the  button to enter Setup.

 
Press the  button repeatedly to select the Sensors chapter.


Press the  button to enter the Sensors chapter.



Press the  button repeatedly to select the Wind page.

Press the  button to enter the Wind page.


Press the  button repeatedly to select the **WIND +/- %** (Wind speed) parameter.



Press the  button to enter Edit Mode, the parameter value will flash.

Press the  and  buttons to change the displayed value to the required percentage. The display will indicate the percentage correction factor entered.

Press the  button to exit Edit Mode.

Press and hold the  button to exit Setup and return to normal operation.

## 4.4 Compass Calibration and Alignment

To ensure that inaccuracies caused by metallic and magnetic objects on the boat are kept to a minimum it is necessary to calibrate or swing the compass. A deviation caused by surrounding objects will be compensated for and the compass reading may be set to the correct heading.

Press and hold the  button for two seconds to enter Setup.

Press the  button repeatedly to select the Sensors chapter.

Press the  button to enter the Sensors chapter.

Press the  button repeatedly to select the Compass page.

Press the  button to enter the Compass page.

### To Complete a deviation correction turn:


Press the  button to advance to the DEV parameter.

Press the  button to enter Compass Calibration Mode.



Turn the vessel slowly keeping the speed below 4 knots and taking approximately 2 minutes to complete 360 degrees. Keep turning the vessel until the display changes to show a new value (usually about 1.25 turns)


**Note:** If the rate of turn of the vessel is too fast the display will show **TURN HIGH**. It is not necessary to abandon the turn at this stage but do lessen the rate of turn by reducing speed or widening the turning circle.

If required, press the  button to cancel Compass Calibration Mode, the system will revert to its previous value.

### Then, to align the heading:



Steer the vessel on a known heading.

**Note:** Only use the main steering compass as a known heading if you are certain it has been checked and compensated.


Press the  button repeatedly to display the **HDG +/-nnn** (heading angle) parameter.



Press the  button to enter Edit Mode.

Press the  and  buttons to change the displayed heading (in small text) to the known correct value. The display will show the offset entered.

Press the  button to exit Edit Mode.

Press and hold the  button to exit Setup and return to normal operation.

## 5. Installation

### 5.1 Changing the Bezel

Each Remote Display is shipped with one white and one black bezel.

**To change the bezel:**

Caution: work in a location where parts cannot be lost overboard or in the bilges as the keypad mat and lanyard attachment will fall free of the main unit.

Remove the screw securing the lanyard attachment tab (bottom center at the back of the unit).

Insert a large flat screwdriver blade into the lanyard attachment slot and twist gently to separate the bezel and the instrument base at the bottom.

Carefully insert a finger on each side between the bezel and the base and gently flex the sides of the bezel outwards, easing the bezel away from the base.

Insert the keypad into the replacement bezel and lower the main unit into the bezel applying slight pressure until a clicking sound indicates the bezel is attached. Turn over the unit and check the bezel is secure all around.

Replace the lanyard tab in its slot, with the moulded nut facing the back of the unit and replace the screw.

Caution: take care not to over-tighten the screw.

It is not recommended that the bezel is frequently exchanged, this could weaken the clips that attach the bezel to the base of the unit.

### 5.2 Cradle

Each Remote Display is supplied with 2 cradles. It is recommended that one of these is mounted in a sunny or well illuminated place, so that the Remote Display can be left to “recover” during the day in case it has been used extensively at night.

**To install the cradle:**

Using the cradle as a template, drill three 2.5mm holes. Use three self tapping screws (not supplied) to attach the cradle.

## 6 Maintenance and Fault Finding

### 6.1 Care and Maintenance

All Micronet products are totally sealed against water and are not serviceable. Any attempt to take a Micronet product apart will invalidate the warranty.

To clean, use only a damp, soft cloth. No detergents, solvents or abrasives should be used. To avoid damaging a Micronet display unit we recommend storing in the supplied soft pack when not in use.

If the displays are to be stored for a long period of time before next use (over winter) ensure that the batteries are fully charged before storage.

### 6.2 Fault Finding and Technical Support

#### Power No Volts alarm sounds



The Hull Transmitter and Wireless (NMEA) Interface must be connected to external power supplies. If this connection is not made, then you will see this alarm 10 seconds after powering up your system. Any DC voltage between 9 and 30V is sufficient to power the Hull Transmitter and Wireless (NMEA) Interface.

#### Power Save Alarm sounds.



There has been no significant data activity on the network. The alarm sounds to indicate that the display system will turn itself off. To continue using the system press any button to cancel the alarm.

#### Lost Network Alarm sounds.



On a single display this indicates that the particular display has lost communication with the Master\*. Either there is a problem with the Master\* display or the display in question has been moved out of effective range.

On several displays this indicates that these displays have lost communication with the Master\*. Either there is a problem with the Master\* or the Master\* has been moved out of effective range.

The displays will power down shortly after sounding the alarm to save power.

### **A single display flashes the battery symbol and then switches off.**

The battery level is low on the particular display affected. Connect to a 9 to 30V DC power source or leave in bright sunlight for 12 hours minimum to recharge the display's internal battery. If the particular display is the system Master\* then the other displays will sound the "Lost Network" alarm. To continue using the rest of the system power down and restart the system from another display.

**Note:** there is no external power facility for the Remote Display.

### **Low Battery Alarm sounds.**



The power level is low in the Hull Transmitter, Wireless (NMEA) Interface or Wind Transmitter. Enter Setup and Calibration Mode (Page 18) and go to the Health Chapter. Check the battery levels of the Transmitters and Interface Box. The battery level icon should show 1, 2 or 3 bars to ensure correct operation. Connect the Hull Transmitter or Wireless (NMEA) Interface to a 9 to 30V DC power source for 12 hours minimum to recharge the internal battery. Leave the Wind Transmitter in bright sunlight for 12 hours minimum to recharge its internal battery.

### **Data is shown as dashes.**

The information is not being transmitted to the displays. There may be lost communication between the Wind Transmitter or Hull Transmitter and the displays. On any Digital display enter Setup and Calibration Mode (page 18) and scroll through to the Health Chapter. Check the signal levels of the Hull and Wind Transmitters. The signal level should show a value of greater than 3 to ensure correct operation.

### **Compass Transducer rattles and/or splashes**

Good! The fluxgate compass is gimballed in a fluid filled container to ensure it is not affected by the boats movement in the water.

### **Compass information displayed on the system does not agree with the main steering compass**

Ensure that the main steering compass has been swung correctly and is showing correct information. Ensure that the display system has completed correctly the "Swing" procedure described on page 34. If there are still differences, look for magnetic objects (loud speakers, pumps and motors, etc.) close to the transducer and try mounting the compass transducer in an alternative location. After changing position of nearby equipment or the Compass Transducer it will be necessary to re-swinging the compass following the procedure on page 34.

### **Boat Speed reads 0**

Information being transmitted from the Hull Transmitter is being received with a zero value. Check the paddle wheel for fouling, clean it and make sure it turns easily.

### **Wind Speed reads 0**

Information being transmitted from the Wind Transmitter is being received with a zero value. If the anemometer cups at the top of the mast are turning and the wind speed reads zero then there is a problem with your Wind Transmitter.

### **No NMEA data showing on external displays**

From any digital display enter Setup and Calibration Mode (page 18) and scroll through to the Health Chapter. Check the signal level and battery status of the Wireless (NMEA) Interface. If the signal level shows a value of greater than 3 then check the data connections and the settings of the NMEA source equipment to ensure that NMEA 0183 is being transmitted correctly.

### **The Depth Alarm does not sound**

If the actual water depth is shallow and the alarm has not sounded it is most likely that the alarm is switched off. From any Digital Display enter Setup and Calibration Mode (page 18) and scroll through to the Depth Chapter. Ensure the Depth Alarm settings are correct.

**Note: \*** The "Master Display" is normally the display which was used to power up the entire system. This display may be different each time the system is used. If the system is powered up using a Remote Display and that display is in Pocket Mode, the Remote Display will hand over the function of "Master" to another display on the network in order to maintain network continuity if the Remote Display is taken out of network range.

If you are fault finding and are uncertain which display is the Master, switch off the system and switch on again (using a display other than a Remote Display). The display which you switched on is now the Master.



## Warranty Information

### General

All Tacktick products are designed and built to standards suitable for use in a harsh marine environment. If the products are installed correctly and operated as described in the user guides they will provide long and reliable service. For information and assistance Tacktick operates a network of international distributors.

### Limited Warranty

The warranty covers repair or replacement of parts due to faulty manufacturing and includes labour charges. The warranty period is two years from the date of purchase. Tacktick specifically exclude the implied warranty of merchantability and fitness for a particular purpose.

### Conditions

- A receipt with proof of purchase date must be shown to validate any warranty claim.
- The warranty is extended only to the original purchaser and is non transferable.
- Products that have been incorrectly installed or have serial numbers removed will not be covered.
- No compensation is payable for consequential damage caused directly or indirectly by any malfunction of Tacktick products.
- Tacktick is not liable for any personal damage caused as a consequence of using its equipment.
- Tacktick, its distributors or dealers are not liable for charges arising from sea trials, installation surveys or visits to the boat to attend to the product whether under warranty or not.
- Tacktick reserves the right to replace any products deemed faulty, within the warranty period, with the nearest equivalent.
- The terms and conditions of this warranty do not affect your statutory rights.

### Claims Procedure

Product should be returned to the national distributor, or one of its appointed dealers, in the country where it was originally purchased. Valid claims will then be serviced and returned to the sender free of charge. Distributors reserve the right to charge for exceptional or express carriage if requested.

Alternatively, if the product is being used away from the country of purchase, it may be returned to the national distributor, or one of its approved dealers, in the country where it is being used. In this case valid claims will cover parts only. Labour, handling costs and return shipping will be invoiced to the sender.

## Disclaimer

 
Tacktick products should only be considered an aid to navigation and common sense must be applied at all time when navigating at sea.

Tacktick reserves the right to change product specification without notice to comply with its policy of continuous improvement.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions. (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference's that may cause undesirable operation.

Note: the manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Tacktick Ltd hereby declare that the Micronet Remote Display is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.







\*UU064 - GB - rev02\*